

AU FREQUENCY

FR	CH	CH							
		CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
FR	FR1 (1.)	5865M	5845M	5825M	5805M	5785M	5765M	5745M	5725M
	FR2 (2.)	5733M	5752M	5771M	5790M	5809M	5828M	5847M	5866M
	FR3 (3.)								
	FR4 (4.)	5740M	5760M	5780M	5800M	5820M	5840M	5860M	
	FR5 (5.)			5732M	5769M	5806M	5843M		

KEY FUNCTION

1. Long press the key for 2 seconds to enter channel setting mode.
2. Short press the key once to switch the channel from 1 to 8.
3. Long press the key for 2 seconds to enter channel group setting mode.
4. Short press the key once to switch channel group from 1 to 5.
5. Long press the key for 2 seconds to quit setting mode. LED display window will show present group and channel alternately.

Line 1: DC 5V OUT


Line 2: GND

Line 3: Video IN

Line 4: Audio IN

Line 5: GND

Line 6: VDD IN(2S-6S)

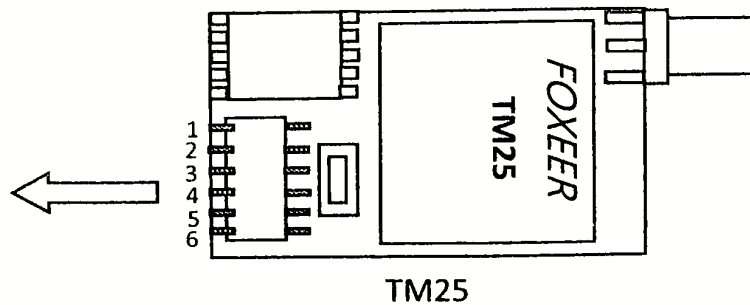

Line 1: DC 5V OUT


Line 2: GND

Line 3: Video IN

Line 4: Audio IN

Line 5: GND

Line 6: VDD IN(2S-6S)

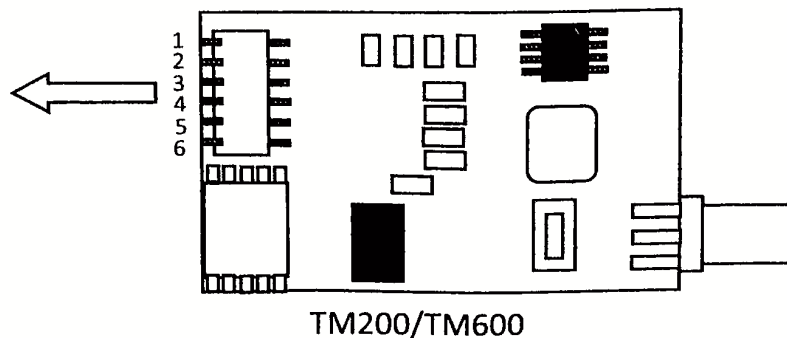

SPECIFICATION

MODEL	TM25	TM200	TM600
Transmitter Frequency(MHz)	Wideband FM Modulate		
Video Format	NTSC/PAL		
Output Impedance	50 Ohm		
Output Power	13 dB	22 dB	28 dB
Input Voltage	DC 7-24V		
Output Voltage	DC 5V		
Operating Temperature	-10~85℃		
Video Band Width	0~8.0MHz		
Audio carrier Frequency	6.5MHz		
Video Input Level	0.8~1.2Vp-p		
Audio Input Level	0.5~2.0Vp-p		
Audio Input Impedance	10K Ohm		
Weight	6.7g	10g	10g
Antenna Connector	SMA/RPSMA		
Accessories	1× Transmitter; 1× cable		

FREQUENCY

FR	CH	CH							
		CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
FR	FR1 (1.)	5865M	5845M	5825M	5805M	5785M	5765M	5745M	5725M
	FR2 (2.)	5733M	5752M	5771M	5790M	5809M	5828M	5847M	5866M
	FR3 (3.)	5705M	5685M	5665M	5645M	5885M	5905M	5925M	5945M
	FR4 (4.)	5740M	5760M	5780M	5800M	5820M	5840M	5860M	5880M
	FR5 (5.)	5658M	5695M	5732M	5769M	5806M	5843M	5880M	5917M