

WARNING: Read the ENTIRE instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury.



 
Age Recommendation: Not for children under 14 years. This is not a toy.

NOTICE: This product is only intended for use with unmanned. hobby- grade, remote-controlled vehicles and aircraft. FOXEER disclaims all liability outside of the intended purpose and will not provide warranty service related thereto.

SUPPORT: Visit www.foxeer.com/ to get more information.

CAMERA-OSD SWITCH CONNECTION

3 Pin To Video Transmitter



2 Pin To OSD Switch board 5 Pin Harness VCC DC 4.6-20V In (Red) õ GND VID Ĉ VSEN Voltage Senser(Blue) OSD * Connect the VSEN cable Wherever

Mini/Micro Camera Back

OSD Switch Front

CAUTION: If you are using ESC's with active braking, we recommend powering the camera system through a BEC or voltage regulator.

CAMERA-VIDEO TRANSMITTER CONNECTION

To connect the camera directly to the video transmitter, plug the 3 pin wiring harness from the video transmitter into the camera, or you can power the camera by other device, PDB, FC, Bat...

MAIN MENU

WR

DAY NIGHT

LANGUAGE

RESET

SAVE EXIT

EXPOSURE

BRIGHTNESS

ADVANCED

EXPOSURE MODE

IMAGE ENHANCE

SPECIAL SETTING

VIDEO SETTING

► AE

Main MENU

MENU: Push MENU(center button) to go to the main menu.

UP/DOWN: Move up and down through the menu.

Left/Right: Modify the menu narameters

AE

Auto Exposure.

- 1. BRIGHTNESS: 0~30.
- 2. EXPOSURE MODE:
 - GLOBE(Global)
 - FLC(Front light control): 1~8
 - BLC(Back light control): 1~8
- 3. ADVANCED: SHUTTER CTRI / GAIN CTRL.
 - SHUTTER CTRL: AUTO

MANUAL: PAL(1/25~1/10000) / NTSC(1/30~1/10000)

- GAIN CTRL:
- AUTO

MANUAL: ANALOG GAIN(1~16) / DIGITAL GAIN(1~15)

WB

Ground Wire(Black)

Video out(Yellow)

OSD (White)

White Balance do not suggest changing it.

MODE: ATW/ MWB

• MWB:

RGAIN: 0~32 BGAIN: 0~32



DAY NIGHT

MODE: FXT(external)/ AUTO/ COLOB/ BW(black and white).

DAY NIGHT MODE 4 FYT N RETURN

IMAGE ENHANCE

CONTRAST: AUTO/MANUAL (0~40) SHARPNESS: AUTO/MANUAL(0~16) COLOR GAIN: AUTO/MANUAI (0~30) 3DNR· AUTO/MANUAL (0~30)

IMAGE ENHANCE	
CONTRAST	AUTO ►
SHARPNESS	< AUTO >
COLOR GAIN	AUTO +
3DNR	AUTO
RETURN	

VIDEO SETTING

VIDEO STANDARD: PAL/NTSC

D-WDR: OPEN/CLOSE

VIDEO SETTING VIDEO STANDARD AL
I
AL
I
AL
I HD FORMAT CVBS D-WDR OPEN ► RETURN

SPECIAL SETTING

VIDEO SCALE: 4:3 / 16:9 NAME: OPEN/CLOSE VOLTAGE: OPEN/CLOSE TIMER: OPEN/CLOSE

PTZ MENU VIDEO SCAL 44.3 1 NAME OPEN VOLTAGE OPEN ► TIMER OPEN I IMAGE STYLE SUNSET + RETURN

LANGUAGE

LANGUAGE: ENGLISH /中文/ PYCCKNN / ESPANOL / ITALIANO /FRANCAIS/ POLSKIM/ PORTUGUES / 日本语 / EAAHNIKA

RESET

RESET: Return to camera's initial setting.



- RETURN AE ADVANCED SHUTTER CTRL

 - GAIN CTRL RETURN

AUTO ► <AUTO ►

∢12 ▶

1

∢GLOBE

ч

.1

.1

ù

ENGLISH •